



Please note: The lower terminals may not be present within the infra-red eye terminal block. Count down from the top of the terminal block when it is positioned as shown - the two top terminals are unused. The following three terminals are connected as shown as then any further terminals (if fitted) are unused.

The infra-red eye should be positioned below the television screen as shown in the diagram to ensure that it receives signals correctly from your remote control. It may not work if placed to the side of the screen.

This cable can be used for all versions of BeoVision 4 TV with any BeoSystem processor, but the Auto-Contrast function (if fitted) will not operate.

---

### Connection of Infra-Red Eye - BeoVision 4 with BeoSystem 1, 2 or 3